

## FITTING INSTRUCTIONS

**Description –** Spare Wheel Spacer Bracket

**Model –** Y61 GU Patrol Wagon

**Part Number –** SWSB-2314

**Tools Required –** ½ Inch Drive Ratchet

14mm Socket

Sharp Knife

6" Extension Bar

16mm Socket

Wheel Brace

**Kit Required –** 1 x Spare Wheel Spacer Bracket

2 x Mylar Protective Strips

4 x M10 Flat Washers

4 x M10\*1.5 Bolts

4 x M10 Spring Washers

Remove spare wheel from rear door.

Using the ratchet, 6" extension and 14mm socket, remove the four (4) bolts securing the spare wheel carrier to the rear door.




Remove the protective backing from the Mylar strips and adhere them to the spare wheel spacer bracket as shown



Determine which height setting is appropriate to your application and remove the Mylar from these holes using a sharp knife.

Note: - The spare wheel spacer bracket can raise the spare wheel carrier by either 40mm or 65mm.

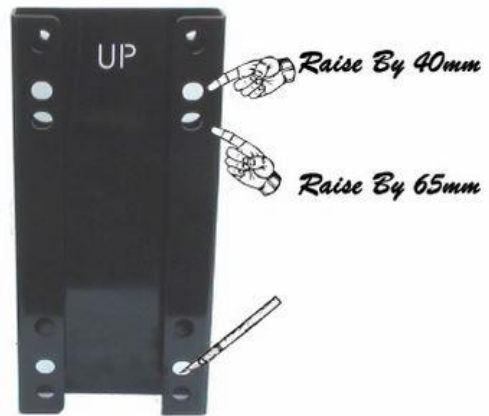

Take the spare wheel spacer bracket and locate it on the door in the position appropriate to your application. (Refer above note)

Secure using the original bolts that secured the spare wheel carrier to the rear door.)



Refit the spare wheel carrier using the bolts, spring washers and flat washers provided.

Refit the spare wheel.

